



Getting Started with the Innovation Station

Summary

Tutorial
TU0136 (v1.0) July 24, 2008

This tutorial provides you with an introduction to Altium's Innovation Station. It includes an overview of the Innovation Station, the role of Altium Designer and the Desktop NanoBoard, FPGA and embedded project creation, targeting a design for the Desktop NanoBoard and more.

The term Innovation Station represents the powerful combination of Altium Designer software and the Desktop NanoBoard reconfigurable hardware platform. Included are all of the tools and technology necessary to capture, implement, test and debug your embedded / FPGA designs, in real-time.

With Altium's Innovation Station, the low level detail is managed for you, leaving you free to focus on device intelligence and functionality – the source of true and sustainable product differentiation.

In this tutorial, we will first define the Innovation Station, then implement a simple processor-based FPGA design, getting it running on a physical FPGA device plugged into the Desktop NanoBoard, showing just how these two component systems work in concert with one another.

During the course of this tutorial, you will gain knowledge of the basics of FPGA design the 'Altium way', introducing you to:

- An overview of the Desktop NanoBoard
- FPGA project creation within Altium Designer
- Use of design hierarchy within an FPGA project
- Implementing an OpenBus-based FPGA design, including sourcing and placing components, connecting them together, and interfacing them to peripherals on the Desktop NanoBoard.
- Creating and linking an embedded project to a soft processor on the target FPGA
- Targeting a design to a daughter board FPGA on the Desktop NanoBoard using the auto-configuration feature
- Processing of a design – compiling, synthesizing and building the design to obtain the programming file used to program the target device
- Using Virtual Instrumentation to control your system

For the example design featured in this tutorial, we will create a basic, reverb-like audio effect, in software, executing on a processor on the target FPGA device. Reverb, like an echo effect, repeats the incoming audio signal, however the echo is decayed to produce an effect that sounds closer to audio echoing in a large area. The decayed signal is then fed back into the input and summed with the current incoming audio, producing a fuller sound that gives us audible clues as to the size of an area.

Our focus for this tutorial is to create the delay and decay components of the reverb effect. A more complete reverb might include options to control the delay and dampening for specific frequency bands.

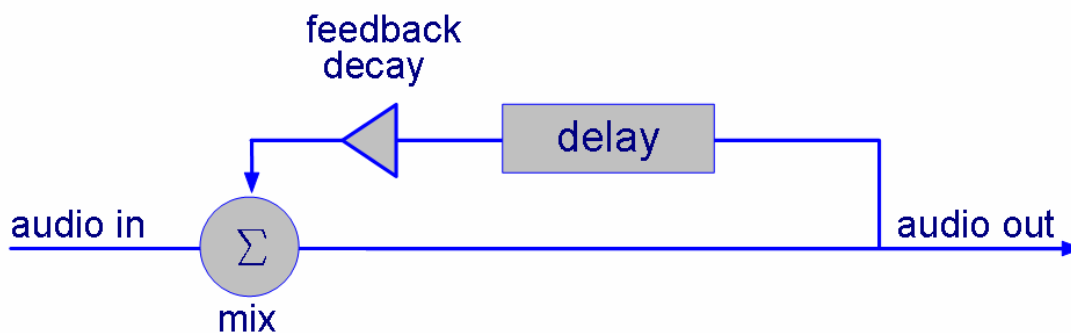


Figure 1. Overview of the audio system

Getting Started with the Innovation Station

The source files can be found in the `\Examples\Tutorials\Getting Started with the Innovation Station` folder of your Altium Designer installation. Refer to this example at any time to get further insight or to skip some of the steps.

What you will need

In order to complete this tutorial, you will need:

- Altium Designer Summer 08 (or later) installed
- A Desktop NanoBoard with PB01 peripheral board and DB30 Spartan3 daughter board (or similar) installed
- An audio source (could be a PC headphone output, MP3 player, etc)
- The loopback audio cable included with your Desktop NanoBoard (or similar cable to connect your audio source to the audio input on the Desktop NanoBoard)
- Vendor build tools. The free version of Xilinx's ISE (8.2.03i or later) will be sufficient if you are using the DB30 daughter board.

What is an Innovation Station?

The term Innovation Station represents the combination of Altium's Desktop NanoBoard and the award-winning Altium Designer software.

As a concept, the Innovation Station was conceived to provide the full range of tools required to design new and innovative electronic products in ways never before possible; truly unlocking the creative potential of every engineer.

The hardware implementation platform - the Desktop NanoBoard - has been specifically designed to work with Altium Designer and makes the process of developing and testing complete systems on real hardware, faster and easier than ever before. Included on the Desktop NanoBoard are the complete range of physical-layer peripherals required to exercise the array of FPGA-based soft IP cores included with Altium Designer. Packaged on removable peripheral boards, these peripherals can be swapped at any time and user designed systems can even be substituted, connecting into the NanoBoard subsystem via one of the 3 high-density peripheral board connectors available.

Altium Designer, the software workhorse that comprises the second half of this powerful pairing, is the first and only fully unified electronics design software tool, spanning Schematic Capture, PCB Layout, FPGA Development, Embedded Software Development, and even CAM. The fundamental difference between Altium Designer and other software tools continues to be Altium's holistic approach to design, looking at electronics design not as a series of individual tasks to be addressed in isolation, but rather as a singular task comprised of many component parts each of which needs to feed off of- and work in concert with- one another.

Altium Designer includes a complete range of reusable IP, packaged as a part of your Innovation Station. This includes soft IP cores for use in FPGA development, the low level software drivers to support the IP from the processor-side, and complete schematics of the each of the subsystems, to make implementing your design in the target system a snap.

Why the Desktop NanoBoard?

The Desktop NanoBoard is a completely reconfigurable hardware development platform that includes a wide range of hardware peripherals, intended to make it easy to leverage the range of soft IP cores supplied with Altium Designer. The peripherals are organized on a series of removable peripheral boards, each connected to the main board by way of a 100 pin connector.

By pairing the hardware with Altium Designer and supplying the complete schematics for the Desktop NanoBoard; Altium has made it possible to leverage the NanoBoard design, in *your* design. So when you select an IP core from the libraries supplied with Altium Designer, you know that not only do you have access to that piece of IP, but you also have a completed physical system to reference in your target board.

Furthermore, each of the NanoBoard subsystems has been captured using Device Sheets which are reusable documents that can be instantiated in your target system using hierarchical symbols. This means that as quickly as you can add and wire-in a sheet symbol into your hierarchical schematics, you can include the physical layer components used to create the Desktop NanoBoard in *your* board.

Capturing the FPGA Design

The first thing we need to do is capture our FPGA design within the Altium Designer environment. Altium Designer provides a range of capture modes including OpenBus, Schematic, VHDL, Verilog, and even C. Deciding on the best method depends on the project and the level of control and customization you are looking for. All of Altium's IP cores are supplied both as OpenBus symbols and schematic components so if you intend to use only the IP supplied with Altium Designer, then either of these two capture methods is preferred.

Of the two, schematic and OpenBus, OpenBus is the fastest to implement, eliminating virtually all of the complicated wiring required in schematic. Because of the required top level schematic, if there is a need to add additional components *not* included in the OpenBus palette, these components can be added at the top level and wired into the sheet symbol as required.

The fact that these capture modes can be mixed and matched makes it possible to develop any range of complex systems with the perfect complement of ease and low-level detail. For example, a design created with Altium IP using OpenBus can be extended using VHDL or Verilog by writing your source code and linking the two documents together at another layer in the project hierarchy.

No matter what method you choose, every FPGA project must contain a top level schematic sheet. This top level sheet will include ports, or port plug-in components (from one of Altium's port plug-in libraries discussed later) as these ports / components represent the pins of the target FPGA device.

The top level schematic sheet can also include soft-core IP components and/or the interfaces to lower level source documents, represented by sheet symbols.

FPGA designs must be hierarchical and the same rules of hierarchy apply to FPGA design as to any other design in Altium Designer (for complete details on hierarchical design in Altium Designer, refer to [AR0123 Connectivity and Multi-Sheet Design](#)).

Since our design uses only Altium IP, the simplest capture method will be OpenBus. This will involve adding the required components to an OpenBus document and connecting them accordingly. However, before we can address the OpenBus document and its contents, we must create a project.

The following sections take you through the steps required to capture our design.

Creating the FPGA Project

The basis for every design created in the Altium Designer environment is a project file. For an FPGA design, we need to create a new FPGA project (*.PrjFpg). The project document itself is an ASCII file that stores the project information such as the documents that belong to the project, output settings, compilation settings, error checking settings, and so on.

Let's go ahead and create the FPGA project.

1. Create a new FPGA project using the **File » New » Project » FPGA Project** command.
2. Right-click on the name for this new project (FPGA_Project1.PrjFpg) in the Projects panel and choose the **Save Project** command. Save the project at a location of your choice with the name `Audio_Effects.PrjFpg`, and in a new folder called `Audio Effects Tutorial`.

Note: Spaces and/or dashes (-) must not be used in project or document filenames. Doing so will result in synthesis errors during design processing. Underscores (_) should be used instead to provide readability.

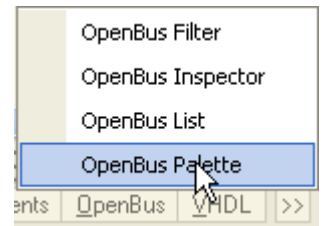
Adding the Schematic and OpenBus Source Documents

The next step is to add the source documents required by our FPGA design. Though the design will be captured in OpenBus, recall that every FPGA project requires a top level schematic document. Thus, we will be adding both a new schematic and new OpenBus document to our project.

1. Add a new schematic document by right-clicking on the FPGA project entry in the **Projects** panel and choosing the **Add New to Project » Schematic** command. A blank schematic sheet will open as the active document in the main design window.
2. Save this document (**File » Save**) with the name `Effects_Sch.SchDoc`, in the same folder as the parent project.
3. Add a new OpenBus document by right-clicking on the FPGA project entry in the **Projects** panel and choosing the **Add New to Project » OpenBus System Document** command. A blank OpenBus document will open as the active document in the main design window.
4. Save this document (**File » Save**) with the name `Effects_OB.OpenBus`, in the same folder as the parent project.
5. The project itself will appear as modified in the **Projects** panel. Save the project also (right-click on its name and choose **Save Project**).

Defining the OpenBus System

OpenBus is a new way of doing system-level FPGA design. Offering a much lighter interface than schematic based implementations, OpenBus is hardly lightweight in its capabilities. By automatically taking care of much of the low-level detail, OpenBus lets you focus on the high-level system and interconnection of major components. You'll find all of the components you need in the **OpenBus Palette** panel. You can display the panel by clicking on the OpenBus panel control in the lower right portion of the main editor and then selecting **OpenBus Palette** from the popup menu.



Placing OpenBus Components

Now that we have our blank OpenBus 'canvas', it's time to add-in the required components that comprise our design circuitry. The **OpenBus Palette** panel contains all OpenBus components that can be used in an OpenBus document. They have been categorized in the palette into groups of Connectors, Processors, Memories and Peripherals. Table 1 identifies the components required by our design.

Symbol	Component Name	Description	Quantity Required
	TSK3000A	TSK3000A 32-Bit, Wishbone-compatible RISC processor	1
	Audio Streaming Controller	Audio streaming controller is used to facilitate data transfers over the inter-IC sound (I2S) bus.	1
	SPI	Provides an SPI master interface, enabling a host processor to communicate with a slave SPI peripheral device which resides outside of the physical FPGA device to which it is targeted, such as the audio DAC and serial Flash RAM devices located on the NanoBoard.	1

Getting Started with the Innovation Station

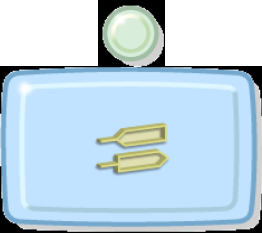
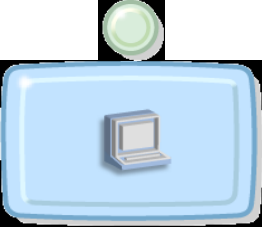
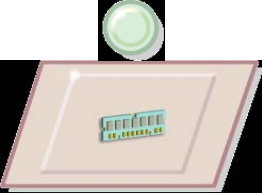

	<p>Port IO</p>	<p>Wishbone-compliant configurable parallel, port unit, providing a simple register interface for storing data to be transferred to/from another device.</p>	<p>1</p>
	<p>Terminal Instrument</p>	<p>Wishbone-compliant instrument allows for effective processor debugging by providing an IO console. Reading and writing data is performed via JTAG and information is entered / displayed textually via the associated instrument panel.</p>	<p>1</p>
	<p>SRAM Controller</p>	<p>Provides a simple interface between a 32-bit processor and Asynchronous Static SRAM.</p>	<p>1</p>
	<p>Interconnect</p>	<p>Provides a means of accessing one or more slave devices over a single Wishbone interface.</p>	<p>2</p>

Table 1. Required OpenBus components

To place an OpenBus component onto an OpenBus document:

1. Select the OpenBus component that you want to place by left-clicking on its icon in the **OpenBus Palette** panel.
2. The component will be locked to the mouse cursor. At this point you can use the **Spacebar** to rotate the component or the **X** or **Y** keys to flip the component along the X or Y axis respectively.
3. Move the mouse to where you want to position the component and **left-click** to place it. The cursor will remain in placement mode to allow you to place multiple instances if required.
4. Press the **Esc** key or right-click the mouse to exit placement mode.
5. Continue placing the components indicated in Table 1 as per the OpenBus diagram in Figure 2.

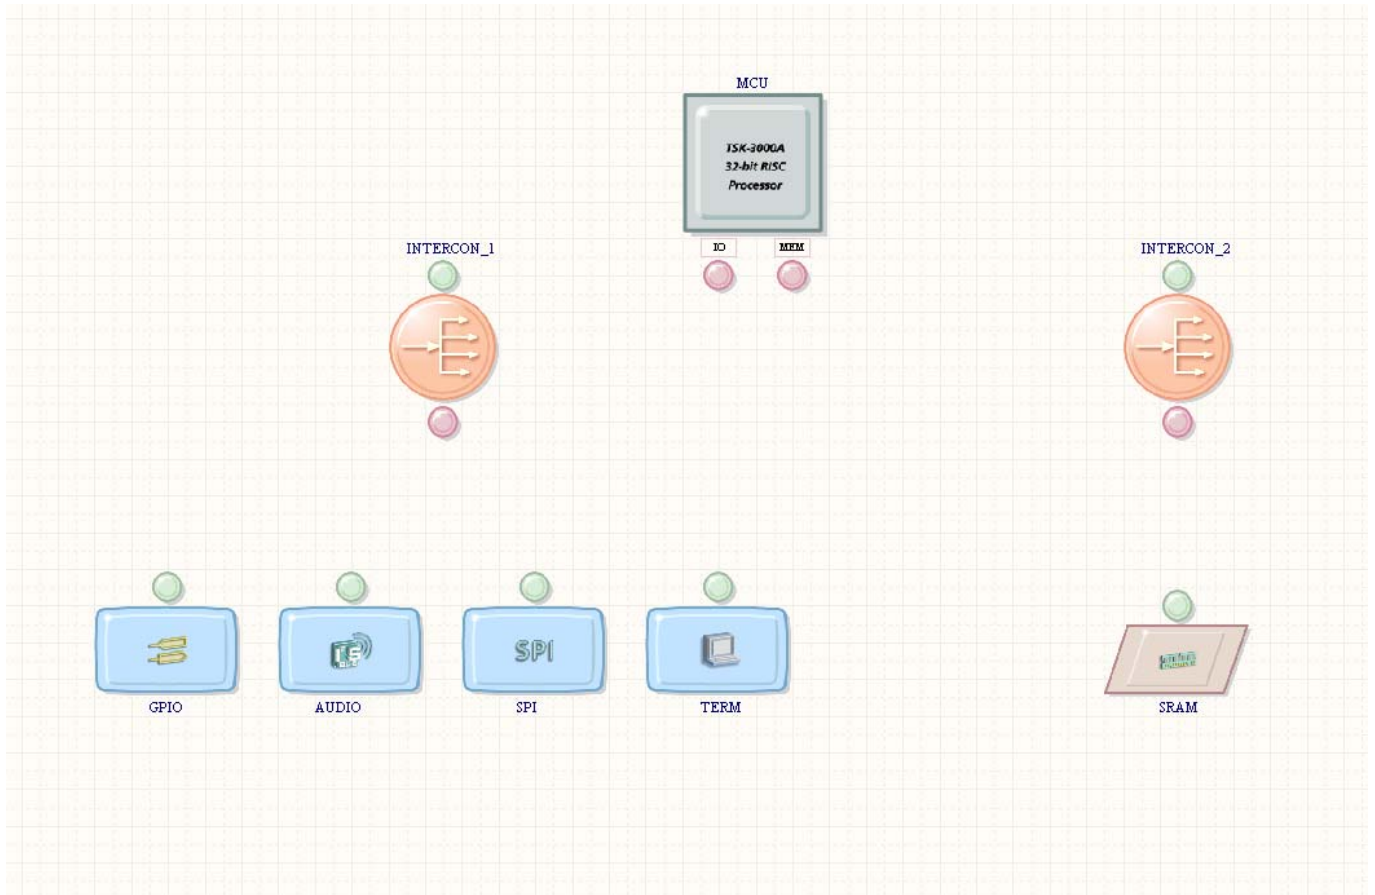




Figure 2. OpenBus components required by the design

To edit the names of the OpenBus components that you have placed:

1. **Left-click** once on the text associated with the OpenBus components that you want to rename. This selects the text.
2. Click a second time on the text or press the **F2** key to enter the edit text mode.
3. Edit the names of the components to match Figure 2.
4. Press the **Enter** key or click somewhere else in the editor window to leave the editing mode and accept your changes.

Once you have placed and named all of the OpenBus components save your work by selecting **File » Save All** from the main menu.

Connecting the OpenBus Components

In order to control the flow of data between the components on your OpenBus document, you will need to place connection links between them. These links indicate bus connections between master ports  and slave ports . The arrow on the connection link indicates the direction of control.

To place a connection link between a master and slave port:

1. Select **Place » Link Open Bus Ports** or click on the **Link Open Bus Ports** icon in the *OpenBus* toolbar.
2. Click the master port that you want to create the link from
3. Click the slave port that you want to connect to
4. Repeat steps 2 and 3 for any additional links that you wish to create. To exit the link placement mode, hit the **Esc** key or **right-click** the mouse.

To remove a connection link between the master and slave port, **left-click** to select the link and hit **Delete**.

To change position of the ports on an OpenBus component, **left-click** and drag the port, repositioning it around the body of the component.

Interconnect Components

Since connection links can only be made between a single master and a single slave, OpenBus Interconnect components are required to allow you to connect multiple components together.

OpenBus Interconnect components have a single slave port and one or more master ports. This allows a master device (connected to the OpenBus Interconnect's slave port) to control multiple other slave devices (connected to the OpenBus Interconnect's master ports).

To add an additional port to an OpenBus Interconnect:

1. Select **Place » Add OpenBus Port** or click on the **Add Open Bus Port** icon in the **OpenBus** toolbar.
2. Hover the mouse over the outer edge of the component you wish to add a new port to. Ports are added at 4 points around the component, the top, bottom, left, and right. Clicking on either side of the component will add the port to the respective side.
3. Click to add the new port.
4. Repeat steps 2 & 3 for any additional links that you wish to create. To exit port placement mode hit the **Esc** key or right-click the mouse.

To remove a port from an OpenBus Interconnect **left-click** to select the port and hit **Delete**.

To change the position of ports on an OpenBus Interconnect simply **left-click** and drag the port, repositioning it around the body of the component.

Completing the OpenBus System

1. Complete the creation of the OpenBus system using the techniques outlined above. The completed system can be seen in
2. Save your work.

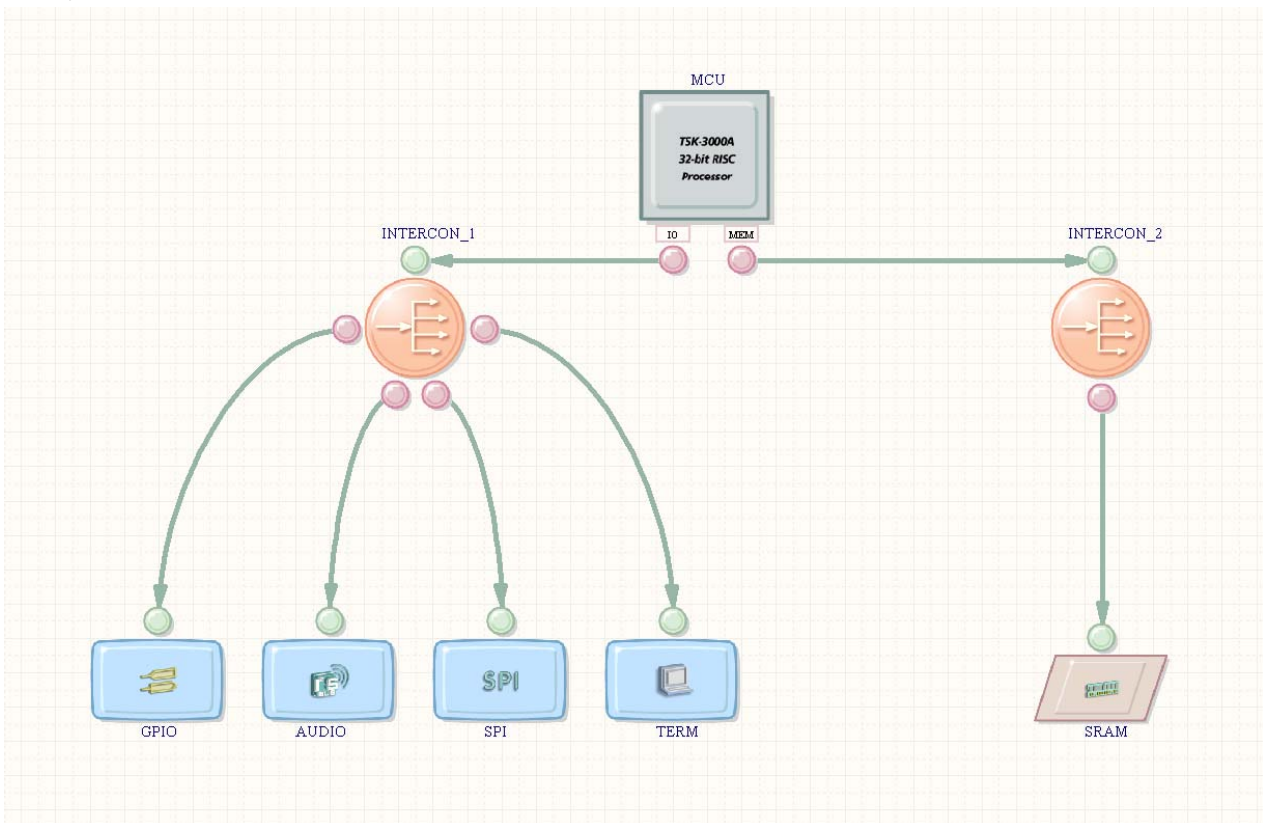


Figure 3. Completed OpenBus connectivity

Configuring OpenBus Components

The vast majority of components found in the OpenBus Palette translate directly to similarly named components found within the FPGA Peripherals and FPGA Processor libraries used for schematic-based FPGA design. In the same way that several of the components in the schematic-based libraries are configurable, so too are their OpenBus counterparts. In this tutorial, we are using several configurable components that will need to be adjusted.

Configuring the Port I/O Component

The Port I/O component, GPIO will be used to create a simple interface to the processor, for use by an instrument we will connect later in this tutorial. For now, we need to configure the port IO and specify the number of ports, their direction, and their width. To configure the Port I/O component for this tutorial:

1. Right-click the GPIO component and select **Configure GPIO (Port IO)** from the right-click menu.
2. In the *Configure OpenBus Port I/O* dialog box:
 - Set the **Kind** to **Input/Output**
 - Set the **Port Count** to **2**
 - Set the **Bus Width** to **8**
3. Click **OK** to save your changes.

Configuring the Memory Controller

The SRAM Controller provides a simple, generic interface to Asynchronous Static RAM. As such, it requires that we configure the component for the amount and type of external memory we intend to use.

1. Right-click the SRAM component and select **Configure SRAM (SRAM Controller)** from the right-click menu.
2. In the *Configure (Memory Controller)* dialog box:
 - Set the **Memory Type** to **Asynchronous SRAM**
 - Set the **Size of Static RAM array** to **1MB (256K x 32-bit)**
 - Set the **Memory Layout** to **2 x 16-bit Wide Devices**
3. Click **OK** to save your changes.

Configuring the Processor

The TSK3000 is a configurable soft processor core and as such requires you specify a few key parameters prior to using it. This includes the size of the internal processor memory, whether or not to use a hardware multiply/divide unit, whether to include an on-chip debugging system and how to manage breakpoints on reset. To configure the processor for this tutorial:

1. Right-click the MCU component and select **Configure MCU (TSK3000A)** from the right-click menu.
2. In the *Configure (32-bit Processors)* dialog box:
 - Set the **Internal Processor Memory** to **32 K Bytes (8K x 32-Bit Words)**
 - Set the **Multiply/Divide Unit (MDU)** to **Hardware MDU**
 - Set the **On-Chip Debug System** to **Include JTAG-Based On-Chip Debug System**
 - Set the final option to **Disable Breakpoints on Hard Reset**
3. Click **OK** to save the changes.

You may receive an error message indicating that there are “2 Nexus JTAG Parts Found but no NEXUS_JTAG_CONNECTOR was found on the top sheet”. This message can be safely ignored as we have not yet completed the top level schematic.

Managing the Memory Map

One of the key benefits of developing our system with OpenBus is the level of automation that OpenBus brings to the management of the system memory map. Ultimately, all peripherals and memory devices sit within a 32-bit memory space that spans 4GBytes. To make the management of this memory space easier, OpenBus intelligently interprets the design and automatically allocates memory spaces for each of the peripherals and memory controllers. In most situations these memory allocations will be sufficient but in some rare cases you may wish to manually edit the memory allocations yourself. You can still do this with OpenBus.

Configuring the Memory Using Interconnect Components

Under normal circumstances, the interconnect component will probe the settings and memory requirements of each of its connected devices and will update the memory map automatically. You can see (and edit) the memory mapping of the interconnect component from the *Configure OpenBus Interconnect* dialog which can be accessed from the component's right-click menu.

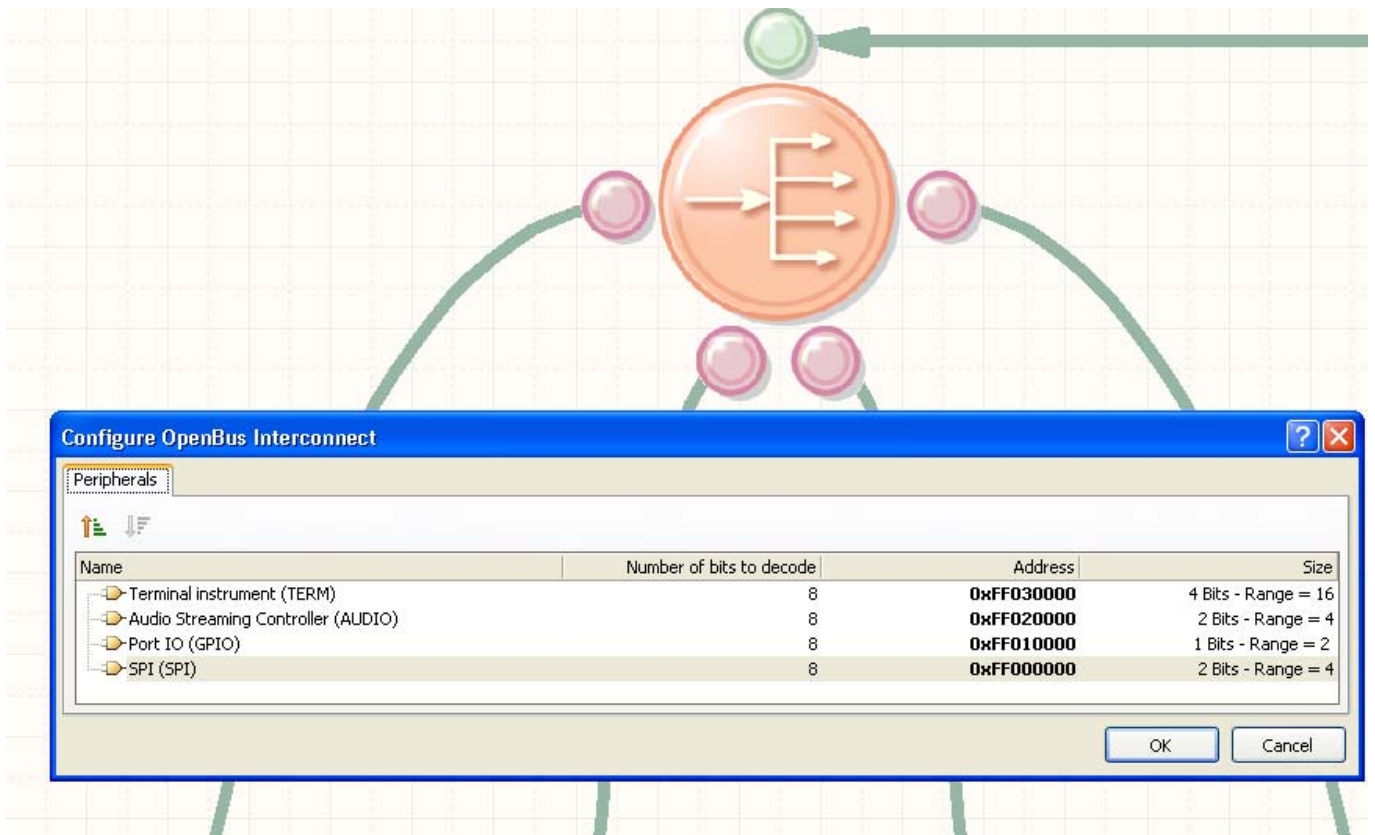


Figure 4. OpenBus interconnect configuration

The Interconnect configuration information is automatically propagated to the memory map of the processor. Do not be concerned if your *Configure OpenBus Interconnect* dialog does not appear exactly as it does in Figure 4. This memory map will be handled automatically and may appear slightly different.

Automating Memory Configuration from within the Processor

In addition to the memory that is managed by each of the interconnect components within the OpenBus document; you can also centrally manage memory from the Processor's memory and peripheral configuration dialog boxes. These can be accessed by right-clicking the processor.

The *Configure Processor Memory* dialog box provides a pictorial representation of where the peripherals and memory controllers will be positioned within the processor's memory. Checking the `hardware.h` (C Header File) option will cause a `hardware.h` header file to be created when the project is compiled. This file contains `#defines` that specify the addresses and sizes of any peripherals and the details of any interrupts used. This will ensure that all OpenBus memory settings are incorporated and synchronized in the design each time it is compiled.

By ensuring this box is checked, any changes you make to the OpenBus document will be propagated through to the embedded project we will create later in this tutorial.

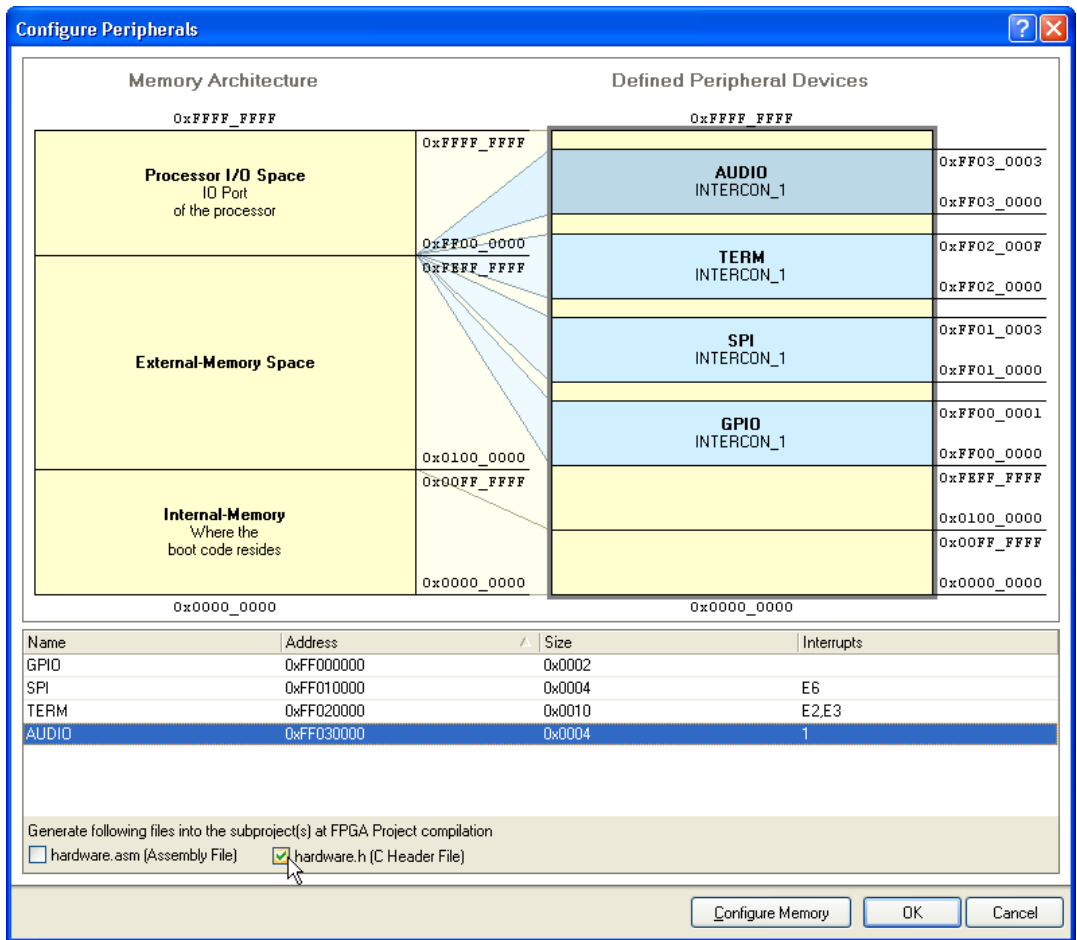


Figure 5 Automating the memory configuration of the processor

To set the project to automatically import the settings from the OpenBus document:

1. Right-click the MCU component and select **Configure Processor Peripheral** from the right-click menu.
2. In the *Configure Peripherals* dialog box, check the **hardware.h (C Header File)** checkbox.
3. Click **OK** to exit.

Managing the Lower Level Signals

Though OpenBus makes strides in simplifying the complex interconnections between components that use a standard bus interface, it is sometimes necessary to have a view into- and control over- the lower level signals in the design. This is useful if for nothing else, to understand how the underlying signals in the OpenBus document get exposed to the top level schematic. All of the signals used for the bus interconnects (links) are visible from the **OpenBus Signal Manager**.

Using the OpenBus Signal Manager

The **OpenBus Signal Manager** (Figure 6), accessed from the **Tools** menu, allows you to take finer control over which signals are to be exposed externally to the OpenBus document.

The **Clocks** and **Resets** tabs will rarely need your attention as the default settings for these are usually adequate. The **Interrupts** tab will need your attention if you are planning on using any peripherals as interrupt sources. From this dialog you can allocate interrupts to the available interrupt channels on the main processor. Since we will be using several interrupts in this design, we will need to specify those connections here.

The list of signals in the **External connection summary** cannot be edited directly however this dialog serves as an excellent reference. All of the signals listed in this dialog will be exported to the parent schematic. The signals are grouped according to the component that controls them, making it easier to identify and locate the source of the different signals. For instance, when you link an OpenBus document to a parent schematic, it may not be immediately apparent where certain signals on the sheet symbol have come from. It is in this dialog box that you will find your answers.

Specifying Interrupts in the OpenBus Signal Manager

The TSK3000A supports a total of 32 interrupt inputs, each of which can be configured to be either level sensitive (active High) or edge triggered (active on a rising edge).

To configure interrupts for the design:

1. Select **Tools » OpenBus Signal Manager**.
2. From the OpenBus Signal Manager dialog, select the **Interrupts** tab.
3. Locate the *Audio Streaming Controller(AUDIO)* in the list of OpenBus peripherals at the top of the dialog and click once in the **Interrupt** column to the right of the signal *INT_O* to expose the drop down.
4. Assign this signal to the interrupt pin **INT_I1** by selecting this item in the list of available interrupts. Notice that the **Kind and Polarity** column is populated automatically. The OpenBus system is aware of the interrupt requirements of each of the OpenBus peripherals and thus there's no reason to manually configure the pin kind or polarity.
5. Locate *SPI(SPI)* in the list of OpenBus peripherals at the top of the dialog and assign the signal *INT_O* the interrupt pin **INT_I2**.
6. Locate *Terminal instrument(TERM)* in the list of OpenBus peripherals at the top of the dialog and assign the signal *INT_O0* to the interrupt pin **INT_I3**.
7. Finally, assign the terminal's *INT_O1* signal to the interrupt pin **INT_I4**. The table of interrupts should now appear as they do in .
8. Click **OK** to exit.

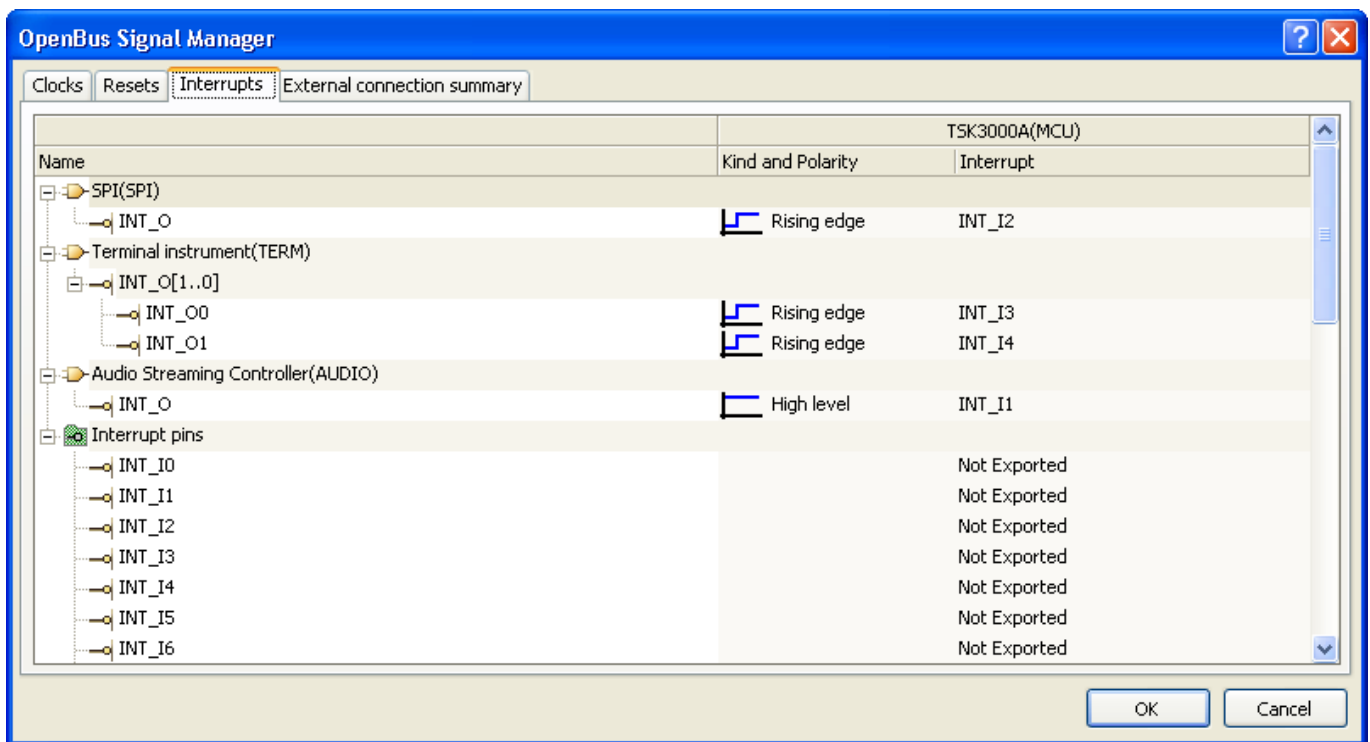


Figure 6. Specifying interrupts from the OpenBus Signal Manager

Linking the OpenBus Document to its Parent Schematic

As mentioned earlier in this tutorial, the top level document in an FPGA project needs to be a schematic. Now that we have created an OpenBus document, we must now link that document back to the top level schematic sheet that we have previously created.

Creating a Sheet Symbol from the OpenBus Document

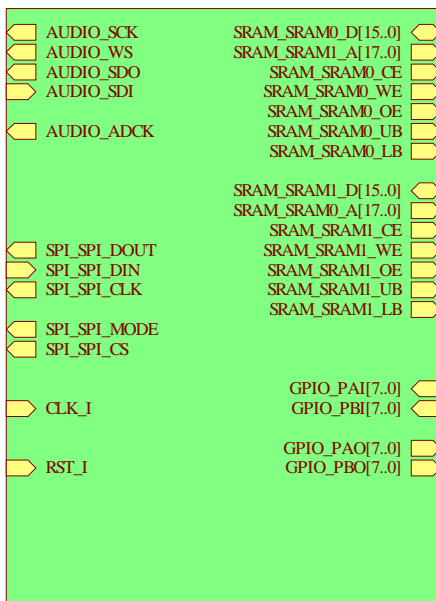
To link the OpenBus document to a parent schematic, you need to create a sheet symbol from the OpenBus document and place it on the parent schematic.

Getting Started with the Innovation Station

1. Open Effects_Sch.SchDoc
2. Select **Design » Create Sheet Symbol from sheet or HDL.**
3. When the *Choose Document to Place* dialog box appears, select the Effects_OB.OpenBus document and click **OK**
4. A large sheet symbol will be attached to the cursor. Position it where you want to place it on the schematic page and click once to commit the placement.

The sheet entries on the newly placed sheet symbol have been loosely organized with inputs and bidirectional signals on the left and outputs on the right. You must now go through the process of positioning all of these sheet entries so that you can connect them to the port plugins in the NanoBoard more easily.

OpenBusEffects



Effects_OB.OpenBus

Figure 7. Organizing sheet entries

Placing the Final Components in Schematic

To complete the placement process and finalize the top level schematic, you'll need to first place a number of components. You'll find these libraries in the \Libraries\FPGA folder of your Altium Designer installation.

1. From the FPGA NB2DSK01 Port-Plugin.IntLib library:
 - CLOCK_BOARD
 - TEST_BUTTON
 - NEXUS_JTAG_CONNECTOR
2. From the FPGA PB01 Port-Plugin.IntLib library:
 - AUDIO_CODEC
 - AUDIO_CODEC_CTRL
4. From the FPGA DB Common Port-Plugin.IntLib library:
 - SRAM_DAUGHTER0
 - SRAM_DAUGHTER1
5. From the FPGA Instruments.IntLib library:
 - DIGITAL_IO
6. From the FPGA Generic.IntLib library:
 - NEXUS_JTAG_PORT
 - OR2N1S
7. From the FPGA Peripherals.IntLib library:
 - FPGA_STARTUP8

Configuring the Digital IO Instrument

With the components placed the next step is to configure the Digital IO Instrument. This instrument is a configurable device that provides an efficient and uncomplicated means by which to monitor/generate digital signals in your design. Once programmed, interaction with this device is done live from within the Altium Designer software, allowing you to read and manipulate signal values of FPGA signals as they execute on the FPGA, in system and in real time.

In this design, the digital IO instrument will be used to mimic the user interface to the system. Instead of building a complete implementation platform, we will use the digital IO instrument to trigger events in the processor, ensuring we can continue on with development though we don't yet have a PCB prototype.



For complete details on the Digital IO instrument see the document [CR0179 DIGITAL_IO Configurable Digital IO Module](#)

To configure the Configurable Digital IO Instrument:

1. Right click the *DIGITAL_IO* component and select **Configure U? (DIGITAL IO)** to launch the *Digital I/O Configuration* dialog.
2. Press the **Add** button to the right of the *Input Signals* section at the top of the dialog to add a second group of signals named `BIN[7..0]`
3. Click once in the **Style** column to the right of the signal `AIN[7..0]` to expose the arrow and select the **Bar** style.
4. Click once in the **Color** column to the right of the signal `AIN[7..0]` to expose the arrow and select the color **Orange**.
5. Press the **Add** button to the right of the *Output Signals* section at the bottom of the dialog to add a second group of signals named `BOUT[7..0]`
6. Click once in the **Style** column to the right of the signal `AOUT[7..0]` to expose the arrow and select the **Slider** style.
7. Click once in the **Style** column to the right of the signal `BOUT[7..0]` to expose the arrow and select the **LED Digits** style. To dialog should now appear as it does in Figure 8
8. Click **OK**.

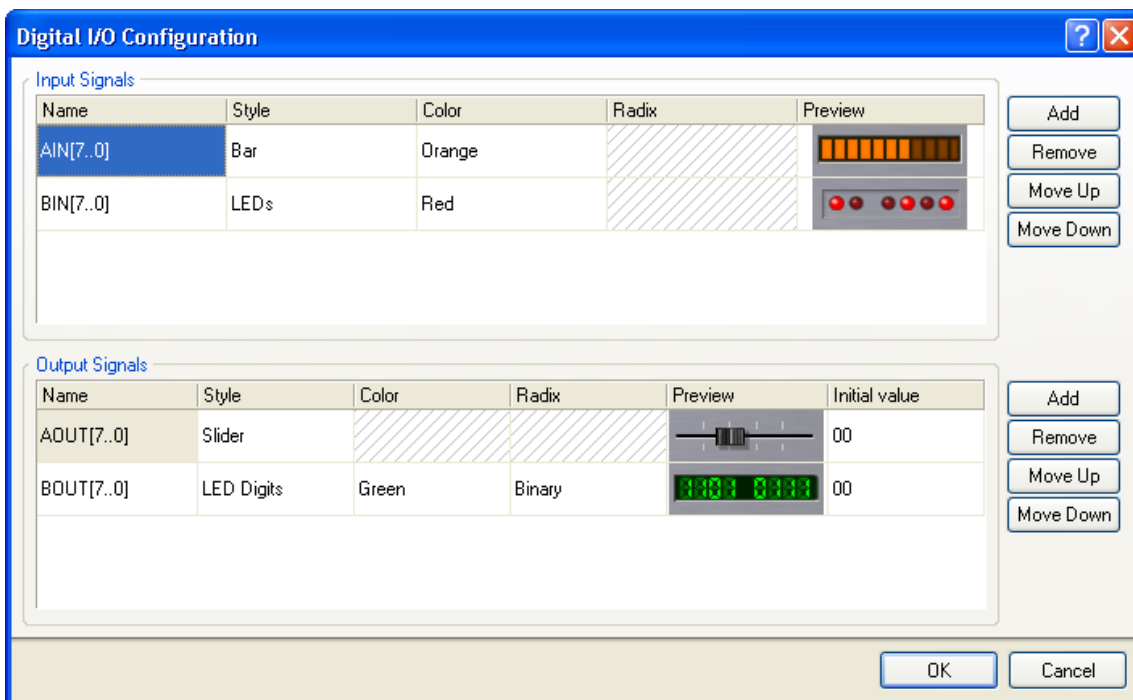


Figure 8. Configuration of the Digital IO instrument

Completing the Schematic Wiring

With the components configured, the next step is to complete the final placement and wiring of the top level schematic.

To complete the wiring of the design:

1. A completed version of the `Effects_Sch.SchDoc` schematic is given in Figure 9. Use this as a guide to position the port-plugin components around the sheet symbol, then reorder the sheet entries so they will line up nicely with them.
2. Using Figure 9 as a guide, complete the wiring of the components in your design.
3. Once you have completed wiring up the schematic, select **Tools » Annotate Schematics Quietly** to annotate the design by giving each component a unique designator.
4. Compile the design by selecting **Project » Compile FPGA Project Audio_Effects.PrjFpg**. Fix any compilation or wiring errors as necessary.
5. Save your work.

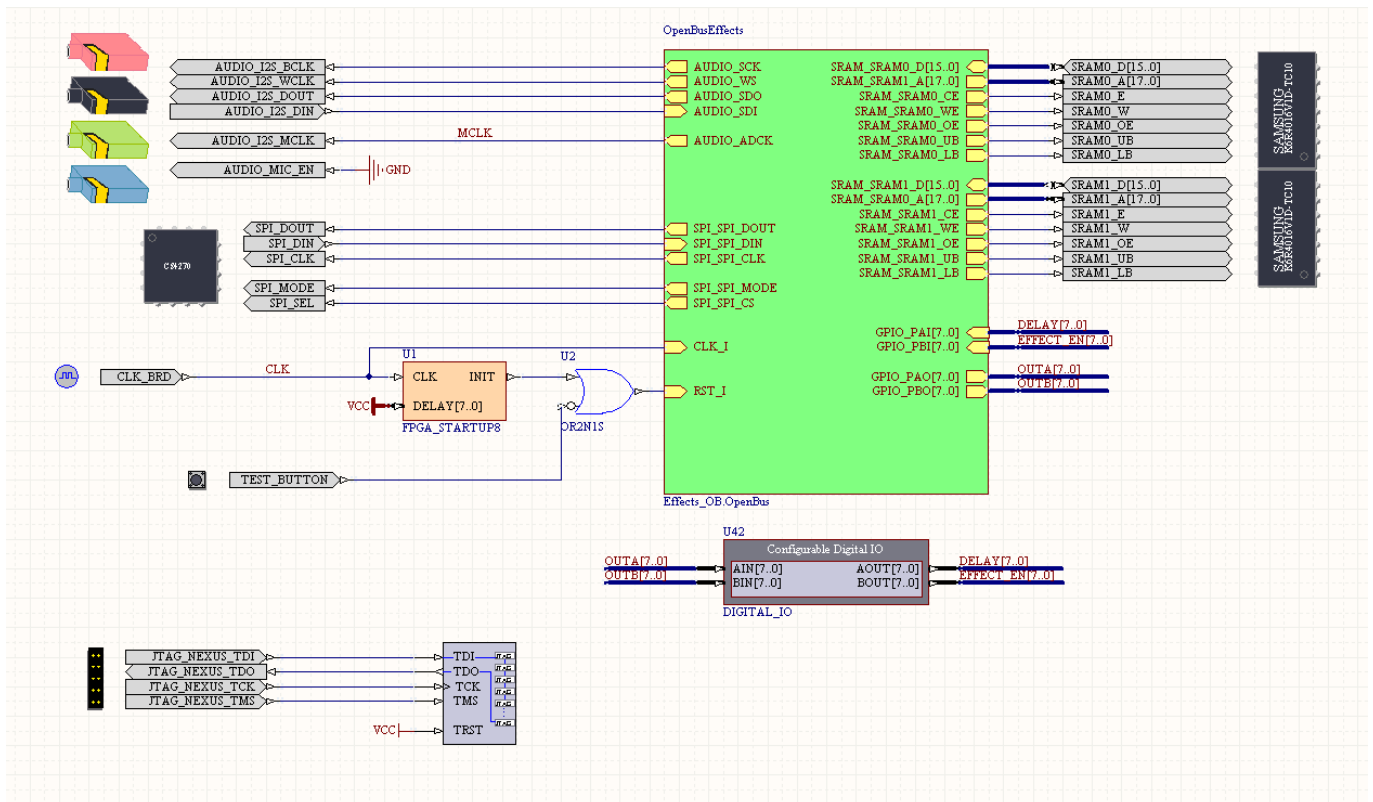


Figure 9. Finalizing the schematic wiring

Configuring projects to run on the Desktop NanoBoard

At this point, we have completed the bulk of the FPGA design but there is one additional step required before we can run it on the Desktop NanoBoard. Constraining an FPGA design is the process of defining the specific FPGA pins that you want each of the signals in your design to appear on. This is an important step as it will ensure that the FPGA design is able to interact with NanoBoard resources that have been hardwired to the FPGA daughter board.

When defining constraints, it is possible to hardcode them into the top-level schematic sheet but this is not advisable. The reason for this is because it binds the design to a specific device and limits your ability to retarget a different FPGA should the need arise. Best practice is to store constraint information in a separate location to the schematic. Altium Designer implements this approach using a set of pre-built and user-definable constraint files which can be added to the FPGA project.

Auto-configuring projects running on the Desktop NanoBoard

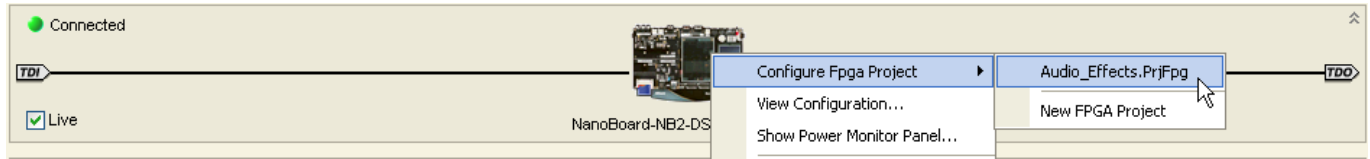


Figure 10. Auto configure the FPGA project

In order to make the process of targeting your design to the Desktop NanoBoard easier, Altium Designer includes a handy auto configuration feature. By utilizing some smarts that have been built into the NanoBoard’s firmware, Altium Designer is able to probe the Desktop NanoBoard and determine exactly what daughter and peripheral boards are connected. A set of pre-defined constraint files will then be loaded and grouped together into a configuration that targets your specific hardware setup.

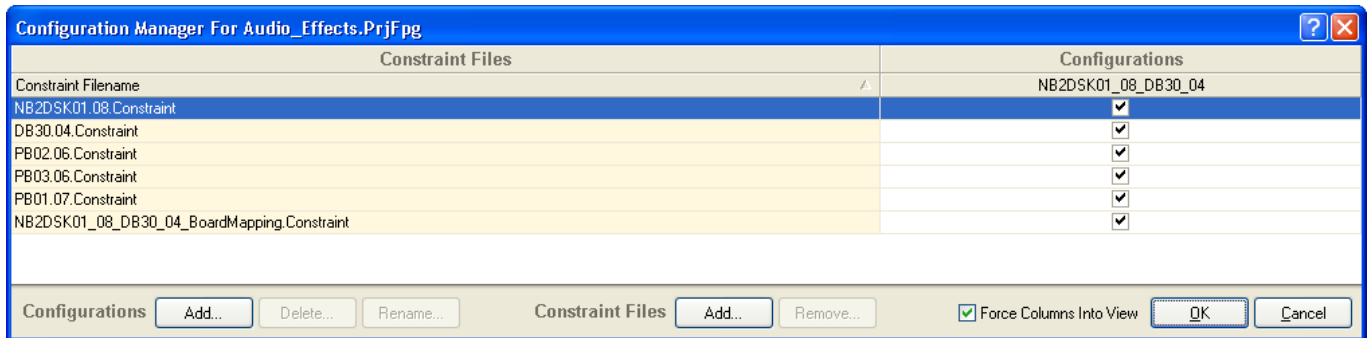


Figure 11. Configuration manager dialog

To auto-configure your FPGA design to run on a Desktop NanoBoard:

1. Make sure your Desktop NanoBoard is connected to your PC and powered on.
2. Select **View » Devices View** or click on the **Devices View** icon in the toolbar.
3. In the **Devices View**, ensure that the **Live** checkbox is checked. You should see a picture of the Desktop NanoBoard in the upper region of the display.
4. Right-click the Desktop NanoBoard icon and select **Configure FPGA Project » Audio_Effects.PrjFpg**.
5. Altium Designer will take just a few moments to probe the Desktop NanoBoard and create a new configuration. Click OK to accept the new configuration.

You may notice that a new **Settings** folder has been added to the project. In this folder you will find a **Constraint Files** folder with all of the newly added constraint files.

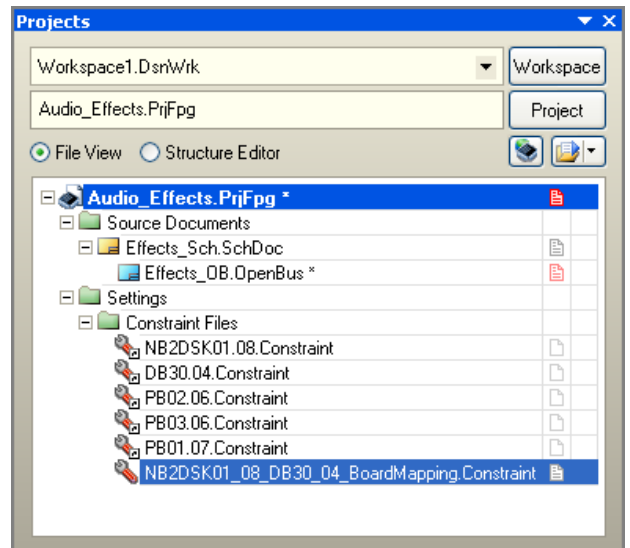


Figure 12. Settings folder in the Projects panel

Several of the files will have a 'shortcut' symbol. Altium Designer uses this notation to indicate files which are not stored in the main project folder. These particular files are all pre-defined constraint files that are shipped with Altium Designer. They are specific to the various peripheral and daughter boards that they represent and should NOT be edited as changes made to these files will affect all other projects that you build for the Desktop NanoBoard.

The constraint file that has been highlighted in Figure 12 was automatically created by the auto-configure process and is stored with the project. This file defines where the peripheral boards are located on the Desktop NanoBoard.

Creating User Constraints

The auto-configuration process deals with the mapping of ports defined on the top-level FPGA schematic and their target FPGA pins. There are, however, additional constraints (such as the clock frequency) that are important for the design but which can not be handled automatically. In order to capture this information, it is best to create another constraint file that is reserved for this information and add it to the configuration.

Getting Started with the Innovation Station

To create a new user constraint file and add it to the configuration:

1. Right click the `Audio_Effects.PrjFpg` project in the **Projects** panel and select **Add New to Project » Constraint File**.
2. Select **File » Save As** to save the file. Give it a meaningful name such as `MyConstraints.Constraint` and click **OK**.
3. Go to **Project » Configuration Manager** or right click the project in the **Projects** panel and select **Configuration Manager**
4. Locate `MyConstraint.Constraint` in the **Constraint Files** column and check the box in the **Configurations** column to add the constraint to the existing configuration.
5. Click **OK** to close the **Configuration Manager** and save your changes.

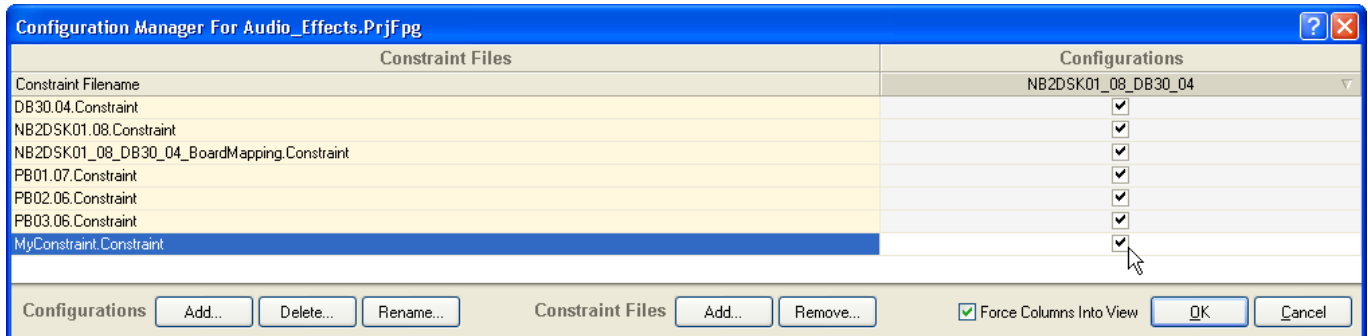


Figure 13. Adding a new constraint file to the configuration

To add a clock constraint to the `CLK_BRD` signal:


1. Open `MyConstraints.Constraint`
2. Select **Design » Add Modify Constraint » Port**
3. In the Add/Modify Port Constraint dialog:
 - Set the **Target** to `CLK_BRD`
 - Set the **Constraint Kind** to `FPGA_CLOCK_FREQUENCY`
 - Set the **Constraint Value** to `50MHz`
4. Click **OK** to close the Add/Modify Port Constraint dialog.
5. Observe that a new constraint record has been added to `MyConstraints.Constraint`. Save your work.

Record=Constraint | TargetKind=Port | TargetId=CLK_BRD | FPGA_CLOCK_FREQUENCY=50MHz

Building the FPGA Design

Once the FPGA design has been defined along with its constraints, you are now ready to build it. Building an FPGA design is the process of compiling and synthesizing your entire FPGA design into a configuration bit file that can be downloaded and run from the target FPGA device. Altium Designer standardizes the way you build an FPGA design so that it is vendor independent. You'll recall that a copy of the Vendor tools for the specific device you are targeting was listed in the *What you will need* section of this tutorial. Altium Designer needs these vendor tools in order to place and route the design but the interaction with these back end tools will be largely transparent to the user.

To build an FPGA design:

1. Make sure your Desktop NanoBoard is connected to your PC and powered up.
2. Select **View » Devices View** or click on the **Devices View** icon  in the toolbar.
3. Ensure the **Live** checkbox is checked. You should see a picture of the Desktop NanoBoard in the upper region of the display and an icon of the Spartan 3 FPGA in the middle region.
4. In the drop down list just below the Spartan 3 icon, be sure that the `Audio_Effects / NB2DSK01_08_DB30_04` project / configuration pair is selected.
5. Locate the **Compile**, **Synthesize**, **Build**, **Program FPGA** buttons running left to right just below the Desktop NanoBoard icon. As this is the first time you have built your design, the colored indicators on each of the buttons will appear **RED**. Click once on the words **Program FPGA** to begin the build process.
6. As the build process progresses, the colored indicator from each stage will turn yellow while it is processing and then green when completed successfully. The process of building the design may take several minutes to complete. You can observe

Getting Started with the Innovation Station

the progress of the build from the **Messages** and **Output** panels which can be accessed from the **System** panel tab in the lower right section of the main workspace.


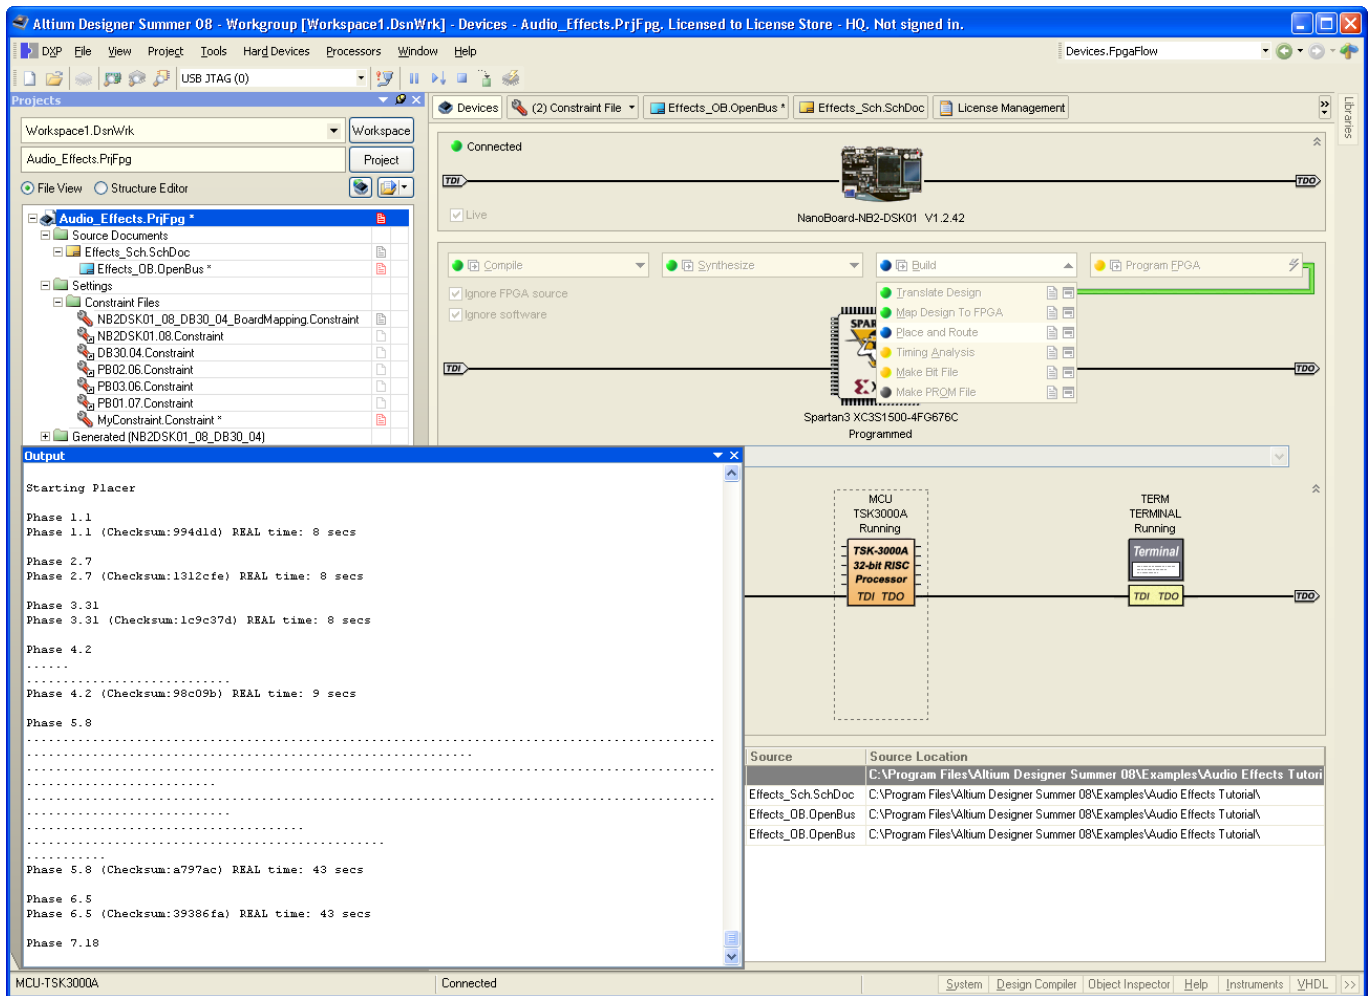


Figure 14. FPGA Build process in the Devices View

7. If any errors occur you will need to rectify them before you can proceed. Try to locate the source of the error by retracing your steps through the instructions of the tutorial.
8. A summary dialog will be displayed once the design has been built and downloaded successfully. Click **OK** to close this dialog.

Once the FPGA design has been downloaded to the Desktop NanoBoard, you should notice that the status of the TSK3000 processor has changed from **Missing** to **Running**.

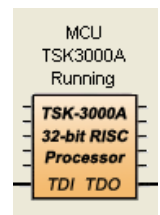We can now begin work on the embedded code that this processor will run.



Developing the Embedded Code

Altium Designer uses an Embedded Project as the container for all of the source code intended to execute on a given target. To create a new embedded project:

1. Select **File » New » Project » Embedded Project** from the menus, or click **Blank Project (Embedded)** in the **New** section of the **Files** panel.
2. The **Projects** panel will display a new Embedded project with the default name `Embedded_Project1.PrjEmb`. Select **File » Save Project** or right-click the project in the **Projects** panel and select **Save Project**. Save the file as `Audio_Effects_Emb.PrjEmb`. If you want to keep your embedded project documents separate from your FPGA project documents, you may wish to save the Embedded Project in a subfolder called `Embedded` under your FPGA project folder.

Adding the Source Code to the Embedded Project

When a new embedded project is first created, it will be created as an empty container. You must then add or create the relevant source files to the project. Altium Designer can compile C source files, C header files, or Assembly files as part of your project.

To create a new C file and add it to the project:

1. Select **File » New » C Source Document**, or right-click the embedded project in the **Projects** panel and select **Add New to Project » C File**. A blank text document named `Source1.C` will be added to the Embedded Project and displayed in the main editor window.
2. Rename the newly created file (with a `.C` extension) by selecting **File » Save As**. Navigate to the same folder as your embedded project and type the name `main.C` and click on **Save**.

Linking an Embedded Project to its Target Processor

An Embedded Project can be developed in isolation but pretty soon you're going to want to run it on a target processor. Altium Designer gives you the ability to link your embedded project to an FPGA project containing an embedded processor.

To link an Embedded Project to its target processor:

1. Make sure both the Embedded Project and the FPGA Project that contains the target processor are both loaded in the **Projects** panel.
2. Enable the **Structure Editor** option at the top of the **Projects** panel to switch to the **Structure Editor** mode.
3. Left-click and drag the Embedded Project over the top of the FPGA project. Any valid processor targets will be highlighted in light blue. Drop the project on the MCU (TSK3000A) processor.
4. Switch the **Projects** panel back to **File View**. Observe that the hierarchy of the projects have been updated placing `Audio_Effects_Emb.PrjEmb` as a child of `Audio_Effects.PrjFpg`.

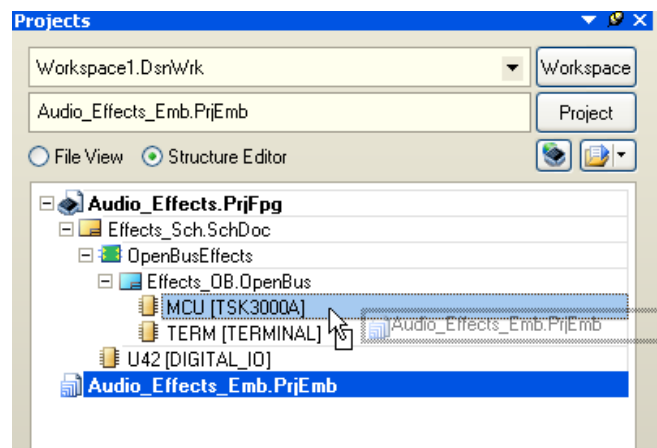


Figure 15. Linking Projects from the Structure Editor

Writing some C Source Code

Now that our Embedded Project has been linked to a hardware platform that it can execute from, we are ready to start writing some C code. We'll take things slowly and using this small section of code, write the value `0x55` to the input at Port A of the Digital IO Instrument.

To add some simple code to the Embedded Project:

1. Open the auto generated `hardware.h` file that is now part of the `Audio_Effects_Emb.PrjEmb` project. Observe that an entry for the Port IO component's base address has been made. The base address `Base_GPIO` may be slightly different in your design.

```
//.....
#define Base_GPIO          0xFF000000
#define Size_GPIO          0x00000002
//.....
```

2. Open `main.C` and enter the following source code:


```
#include "hardware.h"

#define DIGIO_PORTA (*(unsigned char*)Base_GPIO)

void main (void)
{
    DIGIO_PORTA = 0x55;
}
```

3. Switch to the Devices view by selecting **View » Devices View** or clicking on the **Devices View** icon  in the toolbar.

Getting Started with the Innovation Station

4. Click the arrow  to the left of the words *Program FPGA* on the **Program FPGA** button to rerun the FPGA build process.
5. From the **Devices** view, locate the digital IO instrument in the soft JTAG chain. **Right-click** the instrument and select **Instrument** to bring up the device's *Instrument Rack*.
6. The value for the signal $A_{IN}[7..0]$ should display 0x55 as it does in Figure 16.

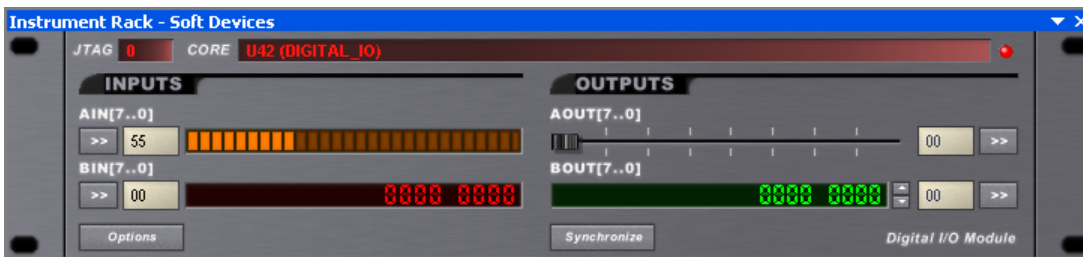


Figure 16. Digital IO instrument rack

If nothing appears on the $A_{IN}[7..0]$ input of the *Digital IO* instrument, be sure that the *OR2N1S* component is correctly positioned on the schematic (changing it will require a re-build of the design from the **Devices View**). The *TEST_BUTTON* port plugin must be connected to the inverted input or the device will remain in a reset state.

Developing the Complete Application

At the beginning of this tutorial, we indicated that we would be developing a complete application capable of accepting an incoming audio signal and producing an audio output with a reverb-style effect added in software. So far we have laid the foundations for this application and only a few steps remain.

Interacting with the Peripherals

As well as providing a number of high-level peripheral devices, Altium Designer also includes software routines that make interfacing with those peripherals much simpler. By using the included Device Software Framework (DSF) provided for these peripherals, you can skip over having to deal with low level interfaces and instead use higher-level control routines. While the software framework 'abstracts away' most of the physical layer from the embedded application development process, you continue to have access to the processor's interrupt system.

All of the source code for the software framework can be found in the `\System\Tasking\dsf` directory under your Altium Designer installation.

To enable the software framework:

1. Add the following `#define` and `#include` statement to the top of `main.C`.

```
#define DSF_IMPLEMENT
#include "dsf_system.h"
```

2. Right click the embedded project in the **Projects** panel and select **Project Options** to launch the *Options for Embedded Project Audio_Effects_Emb.PrjEmb* dialog.
3. Expand **Device Software Framework** from the tree along the left hand side and click on **General**.
4. Select the option **Use Processor Abstraction Layer in project** under **General** in the section to the right.
5. Click **OK**

Though falling outside of the scope of this tutorial, know that the *Processor Abstraction Layer* will be used to initialize the host processor and enable and disable processor interrupts.

Completing the Software

The final step is to complete the software required to create the reverb effect. Figure 17 contains the complete listing of `main.C`.

```

#define AUDIO_CS4270
#define DSF_IMPLEMENT
#include "dsf_system.h"

#include <string.h>
#include <stdint.h>
#include <stdio.h>

#define CLKFREQ 50000000L

#define I2S_BUF_SIZE 512
#define AUDIO_BUF_SIZE 65536 //this number MUST be a power of 2
#define I2S_SAMPLERATE 48000

//buffers for the terminal IO instrument
#define TERMINAL_RXBUFSIZE 256
#define TERMINAL_TXBUFSIZE 256

//millisecond samples
#define MS_SAMPLES (I2S_SAMPLERATE / 1000)

//specify the mode of the I2S interface to stereo
#define I2S_MODE I2S_STEREO

#define I2S_WORDWIDTH 20
#define VOLUME 30

int32_t i2s_inbuf[I2S_BUF_SIZE] = {0};
int32_t i2s_outbuf[I2S_BUF_SIZE] = {0};
int16_t in_temp_buf[I2S_BUF_SIZE / 2] = {0};
int16_t process_buf[AUDIO_BUF_SIZE] = {0};
int16_t loop_buf[AUDIO_BUF_SIZE * 4] = {0};

static uint8_t rxbuf[TERMINAL_RXBUFSIZE];
terminal_receive_buffer_t receive_buffer;

static uint8_t txbuf[TERMINAL_TXBUFSIZE];
terminal_transmit_buffer_t transmit_buffer;

i2s_context_t i2s_context;

void init_audio(void);
void init_terminal(void);
void get_audio(void);
void process_audio_echo(uint8_t delay);
void passthrough(void);
void put_audio(void);

bool terminal_isr_tx(uint32_t int_num, void* ctx)
{
    terminal_handle_tx_interrupt(&transmit_buffer);
    return 0;
}

bool terminal_isr_rx(uint32_t int_num, void* ctx)
{
    terminal_handle_rx_interrupt(&receive_buffer);
    return 0;
}

audio_cs4270_context_t audio_dev;

void main(void)
{
    uint8_t effect_enable;
    uint8_t delay_coefficient = 0;

    pal_interrupt_disable(Intr_AUDIO_A);
    pal_interrupt_disable(Intr_SPI_A);
    pal_interrupt_disable(Intr_TERM_A);
    pal_interrupt_disable(Intr_TERM_B);
    pal_processor_initialize(CLKREQ);

```

```

//initialize terminal
init_terminal();

//initialize the audio
init_audio();

//enable interrupts
pal_global_interrupt_enable();

//enable the general purpose IO port
prtio_open(Base_GPIO);

//output a list of instructions on how to use the digital IO example to control audio on the
terminal
printf("\n\nAudio Reverb Example:\n");
printf("\n1. Set Bit 0 of BOUT[7..0] on the digital IO instrument for audio pass\n
through.\n");
printf("\n2. Set Bits 1 - 7 to initiate the audio Reverb Effect.\n");
printf("   The Slider AOUT[7..0] will control the delay used by the reverb effect.\n");
printf("3. Clear all bits on BOUT[7..0] to stop audio.\n");

while (1)
{
    effect_enable = prtio_read_b(1); //read the value from the digital IO connected into
GPIO port A
    prtio_write_b(1, effect_enable); //loop value of 'a' to the output of the GPIO port
A (display to user)

    //create a coefficient to control the delay from value of digital IO slider at port
B of GPIO (aka Port 0 or OUTB[7..0])
    delay_coefficient = prtio_read_b(0);

    //loop value of delay_coefficient to B input of digital IO to display on the digital
IO input channel B
    prtio_write_b(0, delay_coefficient);

    //function to go and get the audio -- always gets audio when available and tries to
fill input buffer
    get_audio();

    //test for the IO port A status to indicate what type of effect to create
    if (effect_enable==1)
    {
        //simple fetch and put audio function
        passthrough();
        //function to put the audio in the output buffer
        put_audio();
    }
    else if (effect_enable > 1)
    {
        //function to process the audio and create the echo
        process_audio_echo(delay_coefficient);
        //function to put the audio in the output buffer
        put_audio();
    }
}
}

/*
*get audio and place into audio buffer
*/
void get_audio(void)
{
    while (i2s_rx_avail(& i2s_context) < I2S_BUF_SIZE / 2) // if the incoming buffer is < 256
samples (1/2 buffer size), get more samples
    {
        i2s_rx_start(& i2s_context); // if no samples available, make sure the receiver is
running
    }
    i2s_read16(& i2s_context, in_temp_buf, I2S_BUF_SIZE / 2); // read samples into the incoming
buffer
}
}

```

```

/*
*accept incoming audio and create a reverb effect
*/
void process_audio_echo(uint8_t delay)
{
    static    int16_t * prcs_insert_ptr = process_buf;

    //creating 2 pointers, slightly offset from one another to read data at different times in the
    history of the data acquisition process. the delta between the
    //two corresponds to the length of delay
    int16_t * prcs_echo_ptr = prcs_insert_ptr - ((MS_SAMPLES * ((delay) * 5)) + 1);
    int16_t * curr_ptr = in_temp_buf;

    if (prcs_echo_ptr <= process_buf)
        prcs_echo_ptr += AUDIO_BUF_SIZE;

    for (int i = 0; i < I2S_BUF_SIZE / 2; i++)
    {
        *prcs_insert_ptr = (*prcs_echo_ptr >> 1) + *curr_ptr;
        prcs_insert_ptr++;

        if (prcs_insert_ptr == & process_buf[AUDIO_BUF_SIZE])
            prcs_insert_ptr = process_buf;

        curr_ptr++;
        prcs_echo_ptr++;

        if (prcs_echo_ptr == & process_buf[AUDIO_BUF_SIZE])
            prcs_echo_ptr = process_buf;
    }
}

/*
*passthrough audio triggered from the digital IO
*/
void passthrough(void)
{
    static    int16_t * prcs_insert_ptr = process_buf;

    int16_t * curr_ptr = in_temp_buf;

    for (int i = 0; i < I2S_BUF_SIZE / 2; i++)
    {
        * prcs_insert_ptr = * curr_ptr;

        prcs_insert_ptr++;

        if (prcs_insert_ptr == & process_buf[AUDIO_BUF_SIZE])
            prcs_insert_ptr = process_buf;

        curr_ptr++;
    }
}

/*
* write audio to the I2S output buffer
*/
void put_audio(void)
{
    static int16_t * prcs_extract_ptr = process_buf;

    while (i2s_tx_avail(& i2s_context) < I2S_BUF_SIZE / 2) // wait till there is space for the
    received samples to store in the transmit buffer
    {
        i2s_tx_start(& i2s_context); // if no space available, make sure the transmitter is running
    }
    i2s_writel6(& i2s_context, prcs_extract_ptr, I2S_BUF_SIZE / 2);
    prcs_extract_ptr += I2S_BUF_SIZE / 2;
    while (prcs_extract_ptr >= & process_buf[AUDIO_BUF_SIZE])
        prcs_extract_ptr -= AUDIO_BUF_SIZE;
}

```

```

/*
 * initialize the audio peripherals
 */
void init_audio(void)
{
    /* init interrupt */
    pal_register_interrupt_handler(Intr_AUDIO_A, & i2s_context, & i2s_isr);
    pal_interrupt_enable(Intr_AUDIO_A);

    // enable access to tsc2301 by SPI-bus (= device 0xB)
    while (!nanoboard_spi_open(Base_SPI, DEVICE_EXTC0));

    cs4270_init(& audio_dev, Base_SPI);

    nanoboard_spi_close(Base_SPI); // disable SPI access to tsc2301

    /* init I2S core */
    i2s_init(& i2s_context, Base_AUDIO, i2s_inbuf, I2S_BUF_SIZE, i2s_outbuf, I2S_BUF_SIZE,
    I2S_SAMPLERATE, I2S_MODE, I2S_WORDWIDTH, CLKFREQ);
}

void init_terminal(void)
{
    receive_buffer.buffer      = rxbuf;
    receive_buffer.buffer_size = TERMINAL_RXBUFSIZE;
    receive_buffer.baseaddr   = Base_TERM;
    receive_buffer.head       = 0;
    receive_buffer.tail       = 0;

    transmit_buffer.buffer     = txbuf;
    transmit_buffer.buffer_size = TERMINAL_TXBUFSIZE;
    transmit_buffer.baseaddr   = Base_TERM;
    transmit_buffer.head       = 0;
    transmit_buffer.tail       = 0;
    transmit_buffer.busy       = 0;

    terminal_init(Base_TERM, CLKFREQ, 19200, F_UART_TXFULL | F_UART_TXEMPTY | F_UART_RXEMPTY |
    F_UART_RXFULL);

    setbuf( stdout, NULL ); // Disables line buffering on stdout
    setbuf( stdin, NULL ); // Disables line buffering on stdin

    pal_register_interrupt_handler(Intr_TERM_A, NULL, terminal_isr_tx);
    pal_register_interrupt_handler(Intr_TERM_B, NULL, terminal_isr_rx);
    pal_interrupt_enable(Intr_TERM_A);
    pal_interrupt_enable(Intr_TERM_B);
}


int _write( int fd, const char * buf, int size )
{
    for ( fd = 0; fd < size; fd++ )
    {
        terminal_send_byte(Base_TERM, *buf++, &transmit_buffer);
    }
    return size;
}

```

Figure 17. Listing of main.C

Getting Started with the Innovation Station

To complete the embedded project and download the software to the target:

1. Copy the contents of the listing in Figure 17 to the clipboard.
2. Return to `main.C` and use **Edit » Select All** or **Ctrl » A** to select the existing C code and hit **Delete**.
3. Select **Edit » Paste** or **Ctrl+V** to paste the clipboard contents into `main.C`.
4. Save your work.
5. Recompile and download the updated program by pressing the **Compile and Download** button  in the toolbar.
6. Connect an audio source to the black *Line In* port on the back of the Desktop NanoBoard.
7. Switch to the Devices View by selecting **View » Devices View**.
8. Right click the Terminal Instrument and select **Instrument** to launch the device's Instrument Rack. The Terminal Instrument should display a list of instructions as they appear in Figure 18. (These instructions are created using `printf` commands in the `main.C` source file).
9. Launch the instrument rack for the Digital IO instrument and set bit 0 of `BOUT[7..0]` by clicking on the right most bit in the instrument rack. This will enable the audio pass-through and audio should now be heard through the speakers on the Desktop NanoBoard. Use the volume knob on the front of the Desktop NanoBoard to adjust the volume.
10. Set bit 1 of `BOUT[7..0]` from within the Digital IO instrument to enable the reverb effect. Use the slider `AOUT[7..0]` to hear the difference in audio output.

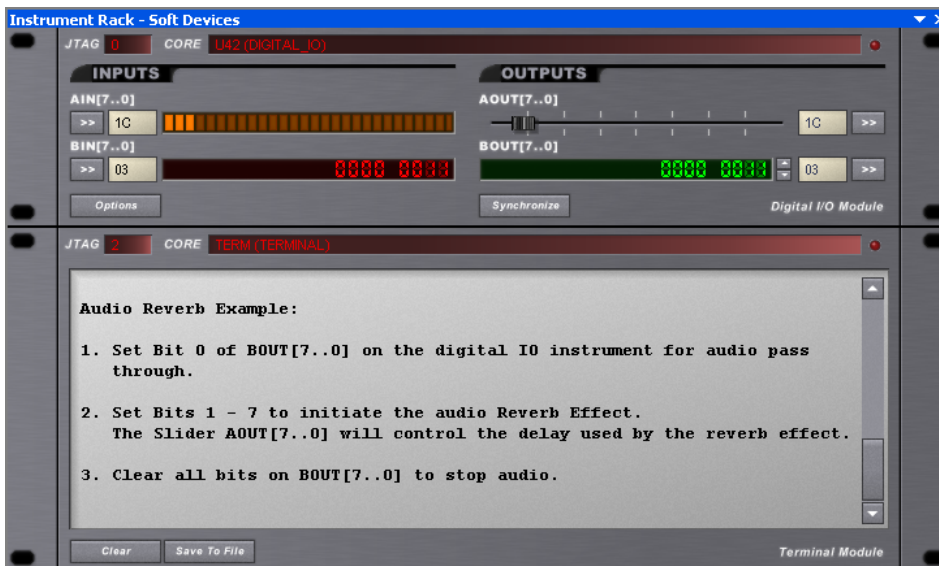


Figure 18. Instrument Rack – Soft Devices

Considering your Deployment Options

Now that we've arrived at a functional design, let's examine how you might deploy your product in the field. Altium provides a range of deployment NanoBoards that you can either use entirely as an off-the-shelf solution or that you can customize with your own peripheral boards. Alternatively you can go for a fully custom PCB solution that makes selective use of existing NanoBoard circuit blocks and combines them together into a single design. The choice of deployment options will be influenced by a range of factors including cost, time to market, logistics, and form and fit constraints. While we can't tell you which solution will be best for your specific situation, we can present the range of options so that you can get a fair indication of their pros and cons.

Level 1: Development of pure 'Device Intelligence'

Almost all designs will begin at this level. The focus of development is around the application software and programmable hardware using one of the Development NanoBoards such as the Desktop NanoBoard. Very little regard is given to the hardware platform to be used in the final implementation and work can rapidly proceed on proving out and cementing the features of the design. The decision of how (or if) to deploy the newly created system is independent of this level of design.



Getting Started with the Innovation Station

Assuming you intend to deploy your design beyond one of the Desktop NanoBoard products, you have two degrees of freedom.

1. Hardware Platform – Will you use off-the-shelf (OTS) hardware, create your own, or use a mixture of the two?
2. Enclosure – Will you use an OTS enclosure, create your own from scratch, or modify an existing one?

The following sections discuss how you might work within these degrees of freedom to varying levels.

Level 2: OTS Hardware Platform, OTS Enclosure

This level is the simplest deployment option as it makes use of both an off-the-shelf hardware platform and enclosure. By using one of Altium's deployment NanoBoards, you can mix and match different daughter boards and peripheral boards to produce a customized hardware platform that is tailored to your application. In addition, enclosing the complete NanoBoard in one of Altium's supplied cases will ensure a professional appearance of your product and avoids the logistical headaches associated with manufacturing. Design compatibility ensures you can seamlessly migrate your design from the Desktop NanoBoard to a complete deployment solution.



Deploying your designs in this fashion allows you to focus primarily on the device intelligence without being bogged down by hardware implementation issues. The unique identification system that has been built into the NanoBoard enables it to probe all connected daughter and peripheral boards and quickly reconfigure the entire design. You can be up and running on your deployment platform in little more than the time it takes to rerun the FPGA build flow.

Level 3: OTS Hardware Platform, Custom Enclosure

Deploying your design using an OTS deployment NanoBoard inside an enclosure of your own design is an incremental step from level 2 that can have a dramatic impact on the level of professionalism that you are able to portray to your customers. Use one of Altium's mechanical STEP models as the basis for customization or construct a completely new enclosure of your own design. Either way, you'll have the ability to tailor the form and fit of your end product to ensure it fits snugly into its final environment.

Altium Designer's 3D bodies allow you to quickly visualize your end product and trap any interference issues that may crop up between the ECAD and MCAD environments.



Level 4: Mixture of OTS and Custom Hardware Platform, OTS or Custom Enclosure

While Altium is continuously developing more peripheral boards, there still might be occasions when you need to include your own custom hardware as part of the design. The expandability of the NanoBoards ensures that this is a relatively simple task

Getting Started with the Innovation Station

and it gives you the best of both worlds. You can selectively customize the hardware platform while still leveraging off the existing infrastructure that has been designed into the NanoBoard architecture.

As with the previous level, the extent to which you use an existing enclosure or create/customize your own is completely up to you.

Level 5: Custom Hardware Platform, OTS or Custom Enclosure

This final level requires the greatest amount of hardware development but gives you the greatest flexibility in terms of form and fit. In particularly cost-conscious applications it may be necessary to rationalize NanoBoard circuitry to only those subsystems that are absolutely necessary to the design. The design reuse capabilities of Altium Designer makes this process a very quick and easy task. Because all of the NanoBoard circuits are included as design reuse blocks and installed as part of Altium Designer, you can link those blocks into your custom hardware design and avoid having to reinvent the wheel. Altium Designer even includes the part numbers and supplier information of all parts used in the NanoBoards. This makes the process of procuring parts an absolute breeze.

Transferring the Design to a Deployment Platform

The deployment level you choose will have some bearing on how simply you can retarget your design. The NanoBoard infrastructure includes intelligence that allows it to probe connected daughter boards and peripheral boards and automatically create a new configuration based on the connected hardware. All hardware supplied by Altium conforms to this standard but if you are using hardware from a third party or your own custom hardware that does not include this feature then you may need to perform some configuration steps manually to arrive at the same destination.

There is plenty of help available in Altium Designer, through the Knowledge Centre, to assist with the creation of new constraint files and configurations and so I won't repeat that content here. It is sufficient to say that once the new configuration has been defined, you can be up and running on your deployment platform in little more than the time it takes to rerun the FPGA build flow.

Revision History

Date	Version No.	Revision
24-July-2008	1.0	Updated with new margins (T-B: 25mm; L-R: 15mm; no mirrored margins) and header/footer (15mm). Main Copyright text changed from Body to Copyright style (legacy fix). Slight modification to footer text positioning.

Software, hardware, documentation and related materials:

Copyright © 2008 Altium Limited. All Rights Reserved.

The material provided with this notice is subject to various forms of national and international intellectual property protection, including but not limited to copyright protection. You have been granted a non-exclusive license to use such material for the purposes stated in the end-user license agreement governing its use. In no event shall you reverse engineer, decompile, duplicate, distribute, create derivative works from or in any way exploit the material licensed to you except as expressly permitted by the governing agreement. Failure to abide by such restrictions may result in severe civil and criminal penalties, including but not limited to fines and imprisonment. Provided, however, that you are permitted to make one archival copy of said materials for back up purposes only, which archival copy may be accessed and used only in the event that the original copy of the materials is inoperable. Altium, Altium Designer, Board Insight, DXP, Innovation Station, LiveDesign, NanoBoard, NanoTalk, OpenBus, P-CAD, SimCode, Situs, TASKING, and Topological Autorouting and their respective logos are trademarks or registered trademarks of Altium Limited or its subsidiaries. All other registered or unregistered trademarks referenced herein are the property of their respective owners and no trademark rights to the same are claimed. v8.0 31/3/08